


Heat Pump Replacement Parts Diagram

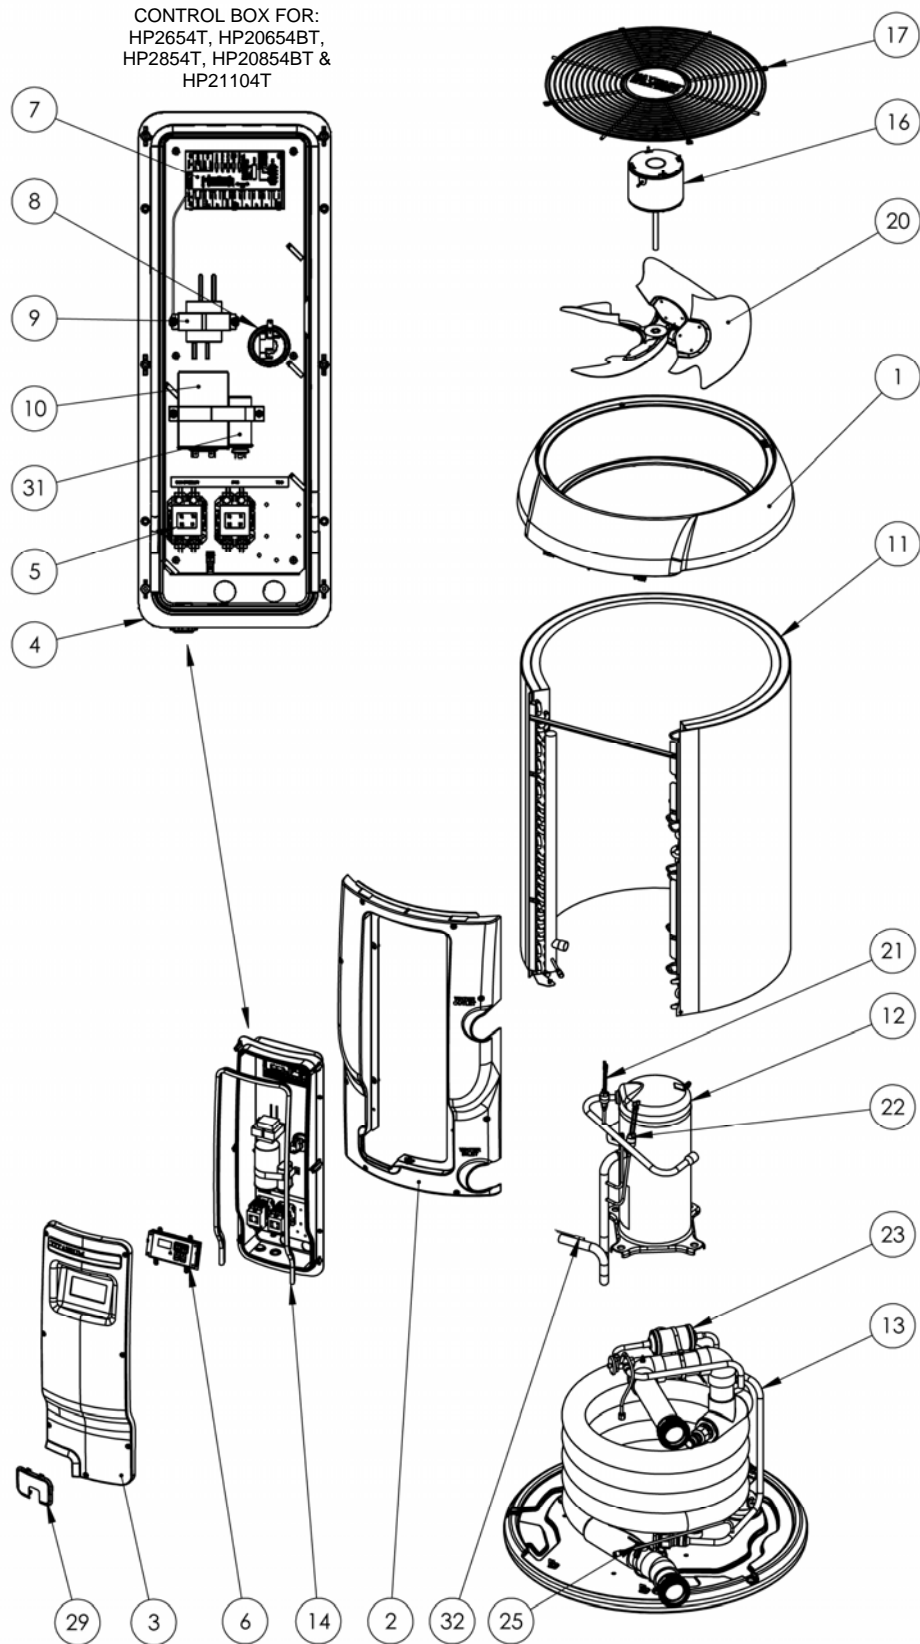

USE ONLY HAYWARD GENUINE REPLACEMENT PARTS

Heat Pump Replacement Parts List

Item	Part description	HP20654T	HP20654BT	HP20854T	HP20854BT	HP21104T	
1	FAN TOP	HPX01023502	HPX01024821	HPX01023502	HPX01024821	HPX01023502	
2	SIDE PANEL	HPX01023503	HPX01024822	HPX01023503	HPX01024822	HPX01023503	
3	CONTROL BOX COVER	HPX01023504A	HPX01023504B	HPX01023504A	HPX01023504B	HPX01023504A	
4	CONTROL BOX	HPX01023505					
5	CONTACTOR	HPX1985					
6	CONTROL BOARD ASSY	HPX26024139					
7	INTERFACE BOARD	HPX11024130					
8	WATER PRESSURE SWITCH	HPX2181					
9	TRANSFORMER	HPX11023693					
10	CAPACITOR	HPX11024270		HPX11024272		HPX11024743	
11	BENT COIL with GUARD	HPX24024238				HPX24024241	
12	COMPRESSOR	HPX11024257		HPX11024204		HPX11024203	
13	CONDENSER	HPX24024712				HPX24024210	
14	COVER GASKET	HPX05023549					
15	HPC CABLE (NS)	HPX10023517					
16	FAN MOTOR, 1/3 HP	HPX11023564					
17	FAN GUARD	HPX01023561					
18	COMPRESSOR BLANKET (NS)	HPX02024108					
19	-	-					
20	FAN BLADE	HPX15024321					
21	REPLACEMENT HP SWITCH	HPX11024258					
22	REPLACEMENT LP SWITCH	HPX11024259					
23	EXPANSION VALVE ASSY	HPX15024216		HPX15024215		HPX15024214	
24	-	-					
25	TEMPERATURE SENSOR	HPX2169					
26	SCREW REPLACEMENT KIT (NS)	HPXSCRKIT1					
27	COMPRESSOR MOUNT KIT (NS)	HPX0054					
28	COMPRESSOR EL. PLUG (NS)	HPX10024732		HPX10024289			
29	ELECTRICAL ENTRY PLUG	HPX01023760					
30	-	-					
31	FAN RUN CAPACITOR	HPX11024151					
32	DEFROST SENSOR	HPX11024169					

USE ONLY HAYWARD GENUINE REPLACEMENT PARTS